

SECTION A1

WOOD'S SURE-GRIP QD BUSHINGS


- Provide a True Clamp Fit
- Are Easy to Install and Remove
- Permit Four-Way Mounting



TB Wood's

SURE-GRIP BUSHING FEATURES

Sure-Grip[®] "Quick Detachable" bushings are easy to install and remove. They are split through flange and taper to provide a true clamp on the shaft that is the equivalent of a shrink fit. All sizes except JA and QT have a setscrew over the key to help

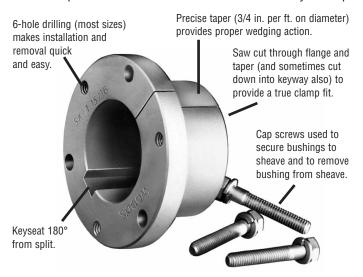


maintain the bushing's position on the shaft until the cap screws are securely tightened. Sure-Grip bushings have a very gradual taper (3/4-inch taper per ft. on the diameter) which is about half the inclined angle of many other bushings. The result is the Sure-Grip securely clamps the shaft, with twice the force of those competitive bushings, to provide extreme holding power.

Versatile Sure-Grip bushings permit the mounting of the same mating part on shafts of different diameters, and the mounting of different sheaves on the same shaft using the same bushing. Their interchangeability extends through sheaves, pulleys, timing pulleys, sprockets, flexible and rigid couplings, made-to-order items by Wood's, and to product lines of several other mechanical power transmission manufacturers.


Sure-Grip bushings are manufactured with the drilled and tapped holes located at a precise distance from the keyseat; thus, a wide mating part having a bushing in each end can be mounted on a common shaft with the two keyways in line. This feature not only facilitates installation but also permits both bushings to carry an equal share of the load.

STANDARD MOUNTING

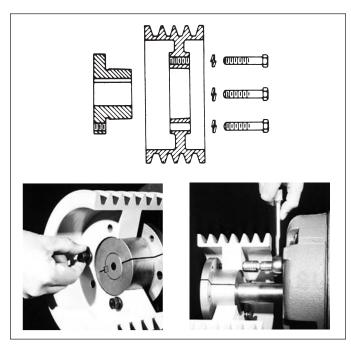

- Cap screws from outside through drilled holes in the mating part and into threaded holes in the bushing flange located on the inside of the assembly. Or the complete assembly reversed on the shaft and:
- 2. Cap screws from inside through drilled holes in the mating part and into threaded holes in the bushing flange located on the outside of the assembly.

REVERSE MOUNTING

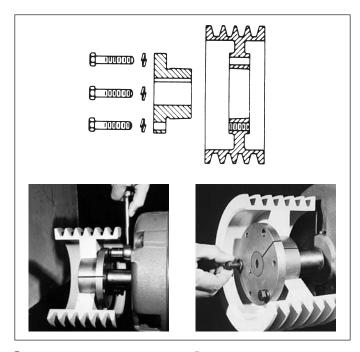


- Cap screws from inside through drilled holes in the bushing flange located on the inside of the assembly and into threaded holes in the mating part.
- 4. Cap screws from outside through drilled holes in the bushing flange located on the outside of the assembly and into threaded holes in the mating part.

SURE-GRIP BUSHING DIMENSIONS



Sure-Grip bushings are designed to transmit the rated torque capacity listed in the table below when the cap screws are tightened as indicated. The bushings are stocked in all popular bore sizes, including metric bores, within the bore range for a particular bushing.

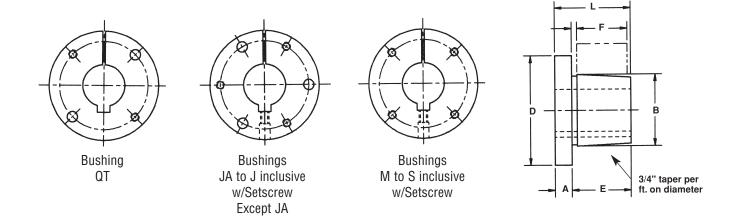

SURE-GRIP BUSHING TORQUE RATINGS AND DIMENSIONS

Bush.	Torque Capacity	(Note 1) Max.	(Note 2) Max.	DIMENSIONS IN INCHES					Bolt	Cap Screws	
<u> </u>	(InLbs.)	Bore	Bore	Α	В	D	E	F*	L	Circle	Required
QT	1,750	1½	30	1/4	1.625	21/2	1	7/8	11/4	2	2-1/4 x 1
JA	1,750	11/4	23	5/16	1.375	2	11/16	9/16	1	1 21/32	3 - #10 x 1
SH	3,500	1 1 1 1 1 1	36	3/8	1.871	211/16	7/8	13/16	11/4	21/4	3-1/4 x 13/8
SDS	5,000	1 15/16	42	7/16	2.1875	33/16	7/8	3/4	1 5/16	2 11/16	3-1/4 x 13/8
SD	5,000	1 15/16	42	7/16	2.1875	33/16	1 3/8	11/4	1 13/ ₁₆	211/16	3-1/4 x 17/8
SK	7,000	21/2	56	1/2	2.8125	37/8	1 3/8	11/4	1 7/8	3 5/16	3-5/ ₁₆ x 2
SF	11,000	215/16	63	1/2	3.125	45/8	11/2	11/4	2	37/8	3-3/8 x 2
E	20,000	31/2	78	3/4	3.834	6	1 7/8	1 5/8	25/8	5	3-1/2 x 23/4
F	40,000	315/16	90	13/16	4.4375	65/8	2 13/16	21/2	35/8	5 5/8	3-9/ ₁₆ x 35/ ₈
J	55,000	41/2	105	1	5.1484	7 1/4	31/2	33/16	41/2	61/4	3-5/8 x 41/2
M	125,000	5 1/2	130	11/4	6.500	91/8	51/2	53/16	63/4	77/8	4-3/4 x 63/4
N	150,000	6	140	11/2	7.000	10	65/8	61/4	81/8	81/2	4-7/8 x 8
Р	250,000	7	160	1 3/ ₄	8.250	113/4	7 5/8	7 1/4	93/8	10	4 - 1 x 9 1/2
W	375,000	8 1/2	200	2	10.437	15	93/8	9	113/8	123/4	4 - 1 1/8 x 111/2
S	625,000	10	240	31/4	12.125	173/4	121/2	12	153/4	15	5 - 11/4 x 151/2

^{*} Mating hub length.

^{1.} MAX INCH BORE WITH KEYSEAT.

^{2.} MAX MM BORE WITH STANDARD KEYSEAT.



SURE-GRIP BUSHINGS BORE AND KEYSEAT DIMENSIONS

Product

No.

(Inches)

Sure-Grip Bushings are available from stock with all the bores and keyseats listed below. In some cases, as the bore increases in diameter, a shallow keyseat is provided—due to insufficient metal thickness. When this happens, Wood's furnishes the correct rectangular key to suit at no charge. This does not affect the bushing's ability to transmit the load. The rectangular key, or flat key as some call it, fits into the standard keyway in the shaft.

Bore

Wt.

(*)

Key Seat

Product No.	Bore	Key Seat	Wt. (*)
	QT BUS	HINGS	
QTMPB QT12 QT9/16 QT58 QT11/16 QT34	7/16 1/2 9/16 5/8 11/16 3/4	No KS 1/8 x 1/16 1/8 x 1/16 3/16 x 3/32 3/16 x 3/32 3/16 x 3/32	.6 .6 .6 .6
QT13/16 QT78 QT15/16 QT1 QT1116	13/16 7/8 15/16 1 1-1/16	3/16 x 3/32 3/16 x 3/32 1/4 x 1/8 1/4 x 1/8 1/4 x 1/8	.6 .6 .6 .6
QT118 QT1316 QT114 QT1516 QT138	1-1/8 1-3/16 1-1/4 1-5/16 1-3/8	1/4 x 1/8 1/4 x 1/8 1/4 x 1/8 5/16 x 1/16 5/16 x 1/16	.6 .6 .6
QT1716 QT112	1-7/16 1-1/2	3/8 x 1/16 3/8 x 1/16	.6 .6
	JA BUS	HINGS	
JAMPB JA12 JA9/16 JA58 JA11/16	1/2 1/2 9/16 5/8 11/16	No KS 1/8 x 1/16 1/8 x 1/16 3/16 x 3/32 3/16 x 3/32	.8 .8 .8 .8
JA34 JA13/16 JA78 JA15/16 JA1	3/4 13/16 7/8 15/16 1	3/16 x 3/32 3/16 x 3/32 3/16 x 3/32 1/4 x 1/8 1/4 x 1/8	.8 .8 .8 .8
JA1116 JA118 JA1316 JA114	1-1/16 1-1/8 1-3/16 1-1/4	1/4 x 1/16 1/4 x 1/16 1/4 x 1/16 1/4 x 1/32	.8 .8 .8
	SH BUS	HINGS	
SHMPB SH12 SH9/16 SH58 SH11/16	7/16 1/2 9/16 5/8 11/16	No KS 1/8 x 1/16 1/8 x 1/16 3/16 x 3/32 3/16 x 3/32	1.1 1.1 1.1 1.1 1.0
SH34 SH13/16 SH78 SH15/16 SH1	3/4 13/16 7/8 15/16 1	3/16 x 3/32 3/16 x 3/32 3/16 x 3/32 1/4 x 1/8 1/4 x 1/8	1.0 1.0 1.0 1.0

			` '
SH B	USHING	S (continued)
SH1116	1-1/16	1/4 x 1/8	.9
SH118	1-1/8	1/4 x 1/8	.9
SH1316 SH114	1-3/16 1-1/4	1/4 x 1/8 1/4 x 1/8	.8 .8
SH1516	1-5/16	5/16 x 5/32	.7
SH138	1-3/8	5/16 x 5/32	.7
SH1716	1-7/16	3/8 x 1/16	.7
SH112	1-1/2	3/8 x 1/16	.6
SH1916	1-9/16	3/8 x 1/16	.6
SH158	1-5/8	3/8 x 1/16	.5
SH11116	1-11/16	No KS	.5
S	DS BUS	SHINGS	
SDSMPB	7/16	No KS	1.7
SDS12	1/2	1/8 x 1/16	1.7
SDS9/16	9/16	1/8 x 1/16	1.7
SDS58 SDS11/16	5/8 11/16	3/16 x 3/32 3/16 x 3/32	1.6 1.6
SDS34	3/4	3/16 x 3/32	1.6
SDS13/16	13/16	3/16 x 3/32	1.6
SDS78	7/8	3/16 x 3/32	1.5
SDS15/16	15/16	1/4 x 1/8	1.5
SDS1	1	1/4 x 1/8	1.5
SDS1116 SDS118	1-1/16 1-1/8	1/4 x 1/8 1/4 x 1/8	1.4 1.4
SDS1316	1-3/16	1/4 x 1/8	1.4
SDS114	1-1/4	1/4 x 1/8	1.3
SDS1516	1-5/16	5/16 x 5/32	1.3
SDS138	1-3/8	5/16 x 5/32	1.2
SDS13838KS	1-3/8 1-7/16	3/8 x 3/16 3/8 x 3/16	1.2 1.2
SDS1716 SDS112	1-1/10	3/8 x 3/16	1.2
SDS1916	1-9/16	3/8 x 3/16	1.1
SDS158	1-5/8	3/8 x 3/16	1.0
SDS11116	1-11/16	3/8 x 3/16	1.0
SDS134	1-3/4	3/8 x 1/8	1.0
SDS11316 SDS178	1-13/16 1-7/8	1/2 x 1/8 1/2 x 1/16	.9 .9
SDS176	1-15/16	1/2 x 1/16	.8
SDS2	2	No KS	.7
	SD BUS	HINGS	
SDMPB	7/16	No KS	2.1
SD12	1/2	1/8 x 1/16	2.1
SD9/16	9/16	1/8 x 1/16	2.1
SD58	5/8	3/16 x 3/32	2.1
SD11/16	11/16	3/16 x 3/32	2.0
MDR Ruchin	ac are une	nlit	

MPB Bushings are unsplit.	MPB	Bushings are	e unsplit.
---------------------------	-----	--------------	------------

Product No.	Bore	Key Seat	Wt. (*)
SD B	USHING	S (continued)
SD34	3/4	3/16 x 3/32	2.0
SD13/16	13/16	3/16 x 3/32	2.0
SD78	7/8	3/16 x 3/32	1.9
SD15/16	15/16	1/4 x 1/8	1.9
SD1	1	1/4 x 1/8	1.8
SD1116	1-1/16	1/4 x 1/8	1.8
SD118	1-1/8	1/4 x 1/8	1.7
SD1316	1-3/16	1/4 x 1/8	1.7
SD114	1-1/4	1/4 x 1/8	1.6
SD1516	1-5/16	5/16 x 5/32	1.6
SD138	1-3/8	5/16 x 5/32	1.5
SD13838KS	1-3/8	3/8 x 3/16	1.5
SD1716	1-7/16	3/8 x 3/16	1.4
SD112	1-1/2	3/8 x 3/16	1.4
SD1916	1-9/16	3/8 x 3/16	1.3
SD158	1-5/8	3/8 x 3/16	1.2
SD11116	1-11/16	3/8 x 3/16	1.2
SD134	1-3/4	3/8 x 1/8	1.1
SD11316	1-13/16	1/2 x 1/8	1.1
SD178	1-7/8	1/2 x 1/16	1.0
SD11516	1-15/16	1/2 x 1/16	.9
SD2	2	No KS	.8
	SK BUS	HINGS	
SKMPB	7/16	No KS	3.6
SK12	1/2	1/8 x 1/16	3.6

SK BUSHINGS								
SKMPB	7/16	No KS	3.6					
SK12	1/2	1/8 x 1/16	3.6					
SK9/16	9/16	1/8 x 1/16	3.6					
SK58	5/8	3/16 x 3/32	3.6					
SK11/16	11/16	3/16 x 3/32	3.5					
SK34	3/4	3/16 x 3/32	3.5					
SK13/16	13/16	3/16 x 3/32	3.5					
SK78	7/8	3/16 x 3/32	3.4					
SK15/16	15/16	1/4 x 1/8	3.4					
SK1	1	1/4 x 1/8	3.3					
SK1116	1-1/16	1/4 x 1/8	3.3					
SK118	1-1/8	1/4 x 1/8	3.2					
SK1316	1-3/16	1/4 x 1/8	3.2					
SK114	1-1/4	1/4 x 1/8	3.1					
SK1516	1-5/16	5/16 x 5/32	3.1					
SK151638KS	1-5/16	3/8 x 3/16	3.1					
SK138	1-3/8	5/16 x 5/32	3.0					
SK13838KS	1-3/8	3/8 x 3/16	3.0					
SK1716	1-7/16	3/8 x 3/16	2.9					
SK112	1-1/2	3/8 x 3/16	2.9					
SK1916	1-9/16	3/8 x 3/16	2.8					
SK158	1-5/8	3/8 x 3/16	2.7					
SK11116	1-11/16	3.8 x 3/16	2.6					
SK134	1-3/4	3/8 x 3/16	2.5					
SK13412KS	1-3/4	1/2 x 1/4	2.5					

⁽Continued—next page)

^{*} Approximate weight in lbs.

SURE-GRIP BUSHINGS BORE AND KEYSEAT DIMENSIONS



(Inches)

	(inches)										
Product No.	Bore	Key Seat	Wt. (*)	Product No.	Bore	Key Seat	Wt. (*)	Product No.	Bore	Key Seat	Wt. (*)
SK B	USHING	S (continued	1)		E BUSH	IINGS		F B	JSHING	S (continued	1)
SK11316 SK178 SK11516 SK2 SK2116	1-13/16 1-7/8 1-15/16 2 2-1/16	1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4	2.4 2.4 2.3 2.2 2.1	EMPB E78 E15/16 E1 E118	7/8 7/8 15/16 1 1-1/8	No KS 3/16 x 3/32 1/4 x 1/8 1/4 x 1/8 1/4 x 1/8	10.8 10.8 10.8 10.7 10.6	F134 F178 F11516 F2 F2116	1-3/4 1-7/8 1-15/16 2 2-1/16	3/8 x 3/16 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4	16.3 16.0 15.8 15.6 15.4
SK218 SK2316 SK214 SK21458KS SK2516	2-1/8 2-3/16 2-1/4 2-1/4 2-5/16	1/2 x 1/4 1/2 x 1/8 1/2 x 1/8 5/8 x 1/8 5/8 x 1/16	2.0 2.0 1.9 1.9	E1316 E114 E1516 E138 E13838KS	1-3/16 1-1/4 1-5/16 1-3/8 1-3/8	1/4 x 1/8 1/4 x 1/8 5/16 x 5/32 5/16 x 5/32 3/8 x 3/16	10.5 10.4 10.3 10.2 10.2	F218 F2316 F214 F21458KS F2516	2-1/8 2-3/16 2-1/4 2-1/4 2-5/16	1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 5/8 x 5/16 5/8 x 5/16	15.2 15.0 14.8 14.8 14.5
SK238 SK2716 SK212 SK2916 SK258	2-3/8 2-7/16 2-1/2 2-9/16 2-5/8	5/8 x 1/16 5/8 x 1/16 5/8 x 1/16 No KS No KS	1.7 1.6 1.5 1.3	E1716 E112 E1916 E158 E11116	1-7/16 1-1/2 1-9/16 1-5/8 1-11/16	3/8 x 3/16 3/8 x 3/16 3/8 x 3/16 3/8 x 3/16 3/8 x 3/16	10.1 10.0 9.9 9.8 9.7	F238 F2716 F212 F2916 F258	2-3/8 2-7/16 2-1/2 2-9/16 2-5/8	5/8 x 5/16 5/8 x 5/16 5/8 x 5/16 5/8 x 5/16 5/8 x 5/16	14.3 14.1 13.9 13.7 13.4
SFMPB SF12 SF58	1/2 1/2 1/2 5/8	No KS 1/8 x 1/16 3/16 x 3/32	5.1 5.1 5.0	E134 E11316 E178 E11516 E2	1-3/4 1-13/16 1-7/8 1-15/16 2	3/8 x 3/16 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4	9.6 9.4 9.3 9.2 9.0	F21116 F234 F21316 F278 F21516	2-11/16 2-3/4 2-13/16 2-7/8 2-15/16	5/8 x 5/16 5/8 x 5/16 3/4 x 3/8 3/4 x 3/8 3/4 x 3/8	13.2 12.9 12.6 12.3 12.1
SF34 SF78 SF15/16 SF1	3/4 7/8 15/16 1	3/16 x 3/32 3/16 x 3/32 1/4 x 1/8 1/4 x 1/8	5.0 4.9 4.8 4.8	E2116 E218 E2316 E214 E21458KS	2-1/16 2-1/8 2-3/16 2-1/4 2-1/4	1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 5/8 x 5/16	8.9 8.8 8.6 8.5 8.5	F3 F318 F3316 F314 F3516	3 3-1/8 3-3/16 3-1/4 3-5/16	3/4 x 3/8 3/4 x 3/8 3/4 x 3/8 3/4 x 3/8 7/8 x 3/16	11.8 11.2 10.9 10.6 11.0
SF1116 SF118 SF1316 SF114 SF1516	1-1/16 1-1/8 1-3/16 1-1/4 1-5/16	1/4 x 1/8 1/4 x 1/8 1/4 x 1/8 1/4 x 1/8 5/16 x 5/32	4.7 4.7 4.6 4.5	E2516 E238 E2716 E212	2-5/16 2-3/8 2-7/16 2-1/2	5/8 x 5/16 5/8 x 5/16 5/8 x 5/16 5/8 x 5/16	8.3 8.1 8.0 7.8	F338 F3716 F312 F358	3-3/8 3-7/16 3-1/2 3-5/8	7/8 x 3/16 7/8 x 3/16 7/8 x 3/16 7/8 x 3/16	10.6 10.3 10.0 9.4
SF138 SF13838KS SF1716 SF112	1-3/8 1-3/8 1-7/16 1-1/2	5/16 x 5/32 3/8 x 3/16 3/8 x 3/16 3/8 x 3/16	4.4 4.4 4.3 4.2	E2916 E258 E2116 E234 E21316	2-9/16 2-5/8 2-11/16 2-3/4 2-13/16	5/8 x 5/16 5/8 x 5/16 5/8 x 5/16 5/8 x 5/16 3/4 x 3/8	7.6 7.5 7.3 7.1 7.2	F31116 F334 F378 F31516 F4	3-11/16 3-3/4 3-7/8 3-15/16	7/8 x 3/16 7/8 x 3/16 1 x 1/8 1 x 1/8 No KS	9.0 8.7 8.1 7.7 6.9
SF1916 SF158 SF11116	1-9/16 1-5/8 1-11/16	3/8 x 3/16 3/8 x 3/16 3/8 x 3/16	4.1 4.0	E278 E21516	2-7/8 2-15/16	3/4 x 3/8 3/4 x 1/8	7.1 6.9		J BUSH	100000000	
SF134 SF11316 SF178 SF11516	1-3/4 1-13/16 1-7/8 1-15/16	3/8 x 3/16 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4	3.9 3.8 3.7 3.6	E3 E318 E3316 E314	3 3-1/8 3-3/16 3-1/4	3/4 x 1/8 3/4 x 1/8 3/4 x 1/8 3/4 x 1/8	6.7 6.3 6.0 5.8	JMPB J1716 J112 J1916	1-7/16 1-7/16 1-1/2 1-9/16	No KS 3/8 x 3/16 3/8 x 3/16 3/8 x 3/16	28.1 28.1 28.0 27.8
SF2 SF2116 SF218 SF2316	2 2-1/16 2-1/8 2-3/16	1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4	3.5 3.4 3.3 3.2	E3516 E338 E3716 E312	3-5/16 3-3/8 3-7/16 3-1/2	7/8 x 1/16 7/8 x 1/16 7/8 x 1/16 7/8 x 1/16	5.7 5.5 5.2 4.7	J11116 J134 J178 J11516	1-11/16 1-3/4 1-7/8 1-15/16	3/8 x 3/16 3/8 x 3/16 1/2 x 1/4 1/2 x 1/4	27.4 27.2 26.7 26.5
SF214 SF21458KS SF2516 SF238	2-1/4 2-1/4 2-5/16 2-3/8	1/2 x 1/4 5/8 x 5/16 5/8 x 3/16 5/8 x 3/16	3.1 3.1 3.1 3.0	FMPB F1	F BUSH	No KS 1/4 x 1/8	17.9 17.9	J2 J218 J2316 J214	2 2-1/8 2-3/16 2-1/4	1/2 x 1/4 1/2 x 1/4 1/2 x 1/4 1/2 x 1/4	26.3 25.8 25.6 25.3
SF2716 SF212 SF2916 SF258	2-7/16 2-1/2 2-9/16 2-5/8	5/8 x 3/16 5/8 x 3/16 5/8 x 1/16 5/8 x 1/16	2.9 2.8 2.6 2.5	F118 F1316 F114 F138	1-1/8 1-3/16 1-1/4 1-3/8	1/4 x 1/8 1/4 x 1/8 1/4 x 1/8 5/16 x 5/32	17.7 17.6 17.5	J2516 J238 J2716 J212	2-5/16 2-3/8 2-7/16 2-1/2	5/8 x 5/16 5/8 x 5/16 5/8 x 5/16 5/8 x 5/16	25.0 24.7 24.5 24.2
SF21116 SF234 SF278 SF21516	2-11/16 2-3/4 2-7/8 2-15/16	5/8 x 1/16 5/8 x 1/16 3/4 x 1/16 3/4 x 1/32	2.4 2.2 1.8 1.7	F1716 F112 F1916 F158	1-7/16 1-1/2 1-9/16 1-5/8	3/8 x 3/16 3/8 x 3/16 3/8 x 3/16 3/8 x 3/16	17.1 16.9 16.8 16.7	J258 J21116 J234 J278	2-5/8 2-11/16 2-3/4 2-7/8	5/8 x 5/16 5/8 x 5/16 5/8 x 5/16 3/4 x 3/8	23.6 23.3 23.0 22.2

^{*} Approximate weight in lbs.



SURE-GRIP BUSHINGS BORE AND KEYSEAT DIMENSIONS

(Inches)

Product No.	Bore	Key Seat	Wt. (*)
J B	USHING	S (continued	
J21516	2-15/16	3/4 x 3/8	21.9
J3	3	3/4 x 3/8	21.6
J318	3-1/8	3/4 x 3/8	20.9
J3316	3-3/16	3/4 x 3/8	20.5
J314	3-1/4	3/4 x 3/8	20.1
J3516	3-5/16	7/8 x 7/16	19.6
J338	3-3/8	7/8 x 7/16	19.3
J3716	3-7/16	7/8 x 7/16	18.9
J312	3-1/2	7/8 x 7/16	18.5
J358	3-5/8	7/8 x 7/16	17.7
J31116	3-11/16	7/8 x 7/16	17.2
J334	3-3/4	7/8 x 7/16	16.8
J31316	3-13/16	1 x 1/2	17.4
J378	3-7/8	1 x 3/8	17.0
J31516	3-15/16	1 x 3/8	16.5
J4	4	1 x 1/8	16.1
J418	4-1/8	1 x 1/8	15.2
J4316	4-3/16	1 x 1/8	14.7
J414	4-1/4	1 x 1/8	14.2
J438	4-3/8	1 x 1/8	13.2
J4716	4-7/16	1 x 1/8	12.7
J412	4-1/2	1 x 1/8	12.2
	M BUS	HINGS	
M11516	1-15/16	1/2 x 1/4	63.7
M2	2	1/2 x 1/4	63.3
M2316	2-3/16	1/2 x 1/4	62.3
M214	2-1/4	1/2 x 1/4	61.9
M238	2-3/8	5/8 x 5/16	61.0
M2716	2-7/16	5/8 x 5/16	60.6
M212	2-1/2	5/8 x 5/16	60.1
M258	2-5/8	5/8 x 5/16	59.3
M21116	2-11/16	5/8 x 5/16	58.8
M234	2-3/4	5/8 x 5/16	58.3
M278	2-7/8	3/4 x 3/8	57.2
M21516	2-15/16	3/4 x 3/8	56.7
M3	3	3/4 x 3/8	56.2
M318	3-1/8	3/4 x 3/8	55.2
M3316	3-3/16	3/4 x 3/8	54.6
M314	3-1/4	3/4 x 3/8	54.1
M338	3-3/8	7/8 x 7/16	52.8
M3716	3-7/16	7/8 x 7/16	52.2
M312	3-1/2	7/8 x 7/16	51.6
M358	3-5/8	7/8 x 7/16	50.4
M31116	3-11/16	7/8 x 7/16	49.7
M334	3-3/4	7/8 x 7/16	49.1
M378	3-7/8	1 x 1/2	47.6
M31516	3-15/16	1 x 1/2	46.9
M4	4	1 x 1/2	46.2
M418	4-1/8	1 x 1/2	44.8
M4316	4-3/16	1 x 1/2	44.1
M414	4-1/4	1 x 1/2	43.4
M438	4-3/8	1 x 1/2	41.9
M4716	4-7/16	1 x 1/2	41.2

•		•	
Product No.	Bore	Key Seat	Wt. (*)
M B	USHING	S (continue	1)
M412	4-1/2	1 x 1/2	40.4
M41116	4-11/16	1-1/4 x 5/8	37.5
M434	4-3/4	1-1/4 x 5/8	36.7
M478	4-7/8	1-1/4 x 1/4	37.8
M41516	4-15/16	1-1/4 x 1/4	37.0
M5	5	1-1/4 x 1/4	36.1
M5316	5-3/16	1-1/4 x 1/4	33.5
M514	5-1/4	1-1/4 x 1/4	32.6
M5716	5-7/16	1-1/4 x 1/4	29.9
M512	5-1/2	1-1/4 x 1/4	28.9
	N BUSH	HINGS	
N21516	2-15/16	3/4 x 3/8	84.1
N3	3	3/4 x 3/8	83.5
N338	3-3/8	7/8 x 7/16	79.3
N3716	3-7/16	7/8 x 7/16	78.6
N312	3-1/2	7/8 x 7/16	77.9
N358	3-5/8	7/8 x 7/16	76.4
N334	3-3/4	7/8 x 7/16	74.9
N378	3-7/8	1 x 1/2	73.1
N31516	3-15/16	1 x 1/2	72.3
N4	4	1 x 1/2	71.5
N4316	4-3/16	1 x 1/2	68.9
N414	4-1/4	1 x 1/2	68.1
N438	4-3/8	1 x 1/2	66.3
N4716	4-7/16	1 x 1/2	65.4
N412	4-1/2	1 x 1/2	64.5
N458	4-5/8	1-1/4 x 5/8	62.0
N434	4-3/4	1-1/4 x 5/8	60.0
N478	4-7/8	1-1/4 x 5/8	58.1
N41516	4-15/16	1-1/4 x 5/8	57.0
N5	5	1-1/4 x 5/8	56.0
N5316	5-3/16	1-1/4 x 1/4	56.1
N5716	5-7/16	1-1/4 x 1/4	51.7
N512	5-1/2	1-1/4 x 1/4	50.6
N578	5-7/8	1-1/2 x 1/4	44.3
N51516	5-15/16	1-1/2 x 1/8	43.9
	P BUSH	HINGS	
P21516	2-15/16	3/4 x 3/8	141.2
P314	3-1/4	3/4 x 3/8	137.6
P3716	3-7/16	7/8 x 7/16	134.9
P312	3-1/2	7/8 x 7/16	134.1
P358	3-5/8	7/8 x 7/16	132.4
P334	3-3/4	7/8 x 7/16	130.6
P378	3-7/8	1 x 1/2	128.5
P31516	3-15/16	1 x 1/2	127.6
P4	4	1 x 1/2	126.7
P414	4-1/4	1 x 1/2	122.7
P438	4-3/8	1 x 1/2	120.7
P4716	4-7/16	1 x 1/2	119.6
P412	4-1/2	1 x 1/2	118.6
P458	4-5/8	1-1/4 x 5/8	115.7
P41116	4-11/16	1-1/4 x 5/8	114.6

Product No.	Bore	Key Seat	Wt. (*)
		S (continue	
P434	4-3/4	1-1/4 x 5/8	113.5
P478	4-7/8	1-1/4 x 5/8	111.2
P41516	4-15/16	1-1/4 x 5/8	110.0
P5	5	1-1/4 x 5/8	108.8
P5316	5-3/16	1-1/4 x 5/8	105.2
P514	5-1/4	1-1/4 x 5/8	103.9
P5516	5-5/16	1-1/4 x 5/8	102.7
P538	5-3/8	1-1/4 x 5/8	101.4
P5716	5-7/16	1-1/4 x 5/8	100.1
P512	5-1/2	1-1/4 x 5/8	98.8
P534	5-3/4	1-1/2 x 3/4	98.1
P578	5-7/8	1-1/2 x 3/4	95.3
P51516	5-15/16	1-1/2 x 3/4	93.9
P6	6	1-1/2 x 1/4	92.5
P6116	6-1/16	1-1/2 x 1/4	91.0
P614	6-1/4	1-1/2 x 1/4	86.6
P6716	6-7/16	1-1/2 x 1/4	83.5
P612	6-1/2	1-1/2 x 1/4	80.5
P634	6-3/4	1-3/4 x 1/8	74.7
P7	7	1-3/4 x 1/8	68.1
	W BUS	HINGS	
W414MPB	4-1/4		247.0
W478MPB	4-7/8		234.0
W514MPB	5-1/4		225.0
W578MPB	5-7/8		209.0
W612MPB	6-1/2		191.0
W714MPB	7-1/4		167.0
	S BUSH	IINGS	
S6MPB	6		445.0
S8MPB	8		356.0
S9MPB	9		301.0

MPB bushings are unsplit.

^{*} Approximate weight in lbs.

SURE-GRIP BUSHINGS (INCHES) WITH METRIC BORE AND KEYSEAT



BORE AND KEY INFORMATION

Product No.	Bore (mm)	Key ■	Wt. (*)	Product No.	Bore (mm)	Key ■	Wt. (*)	Product No.	Bore (mm)	Key ■	Wt. (*)
	QT BUSI	HINGS			SK BUSI	HINGS			F BUS	-	. ,
QT14MM QT15MM QT16MM QT18MM QT19MM QT20MM QT22MM QT24MM QT25MM QT25MM QT35MM QT30MM QT35MM	14 15 16 18 19 20 22 24 25 28 30 32 35	5 x 5 5 x 5 5 x 5 6 x 6 6 x 6 6 x 6 8 x 7 8 x 7 8 x 7 10 x 6†	.6 .6 .6 .6 .6 .6 .6 .6	SK24MM SK25MM SK28MM SK30MM SK32MM SK35MM SK35MM SK40MM SK42MM SK42MM SK45MM SK45MM	24 25 28 30 32 35 38 40 42 45 45 48 50	8 x 7 8 x 7 8 x 7 8 x 7 10 x 8 10 x 8 12 x 8 12 x 8 14 x 9 14 x 9 16 x 10	3.3 3.3 3.2 3.2 3.1 3.0 2.9 3.6 2.7 2.6 2.4 2.3 2.0	F45MM F48MM F50MM F55MM F60MM F65MM F70MM F75MM F80MM F85MM	45 48 50 55 60 65 70 75 80 85 90	14 x 9 14 x 9 14 x 9 16 x 10 18 x 11 18 x 11 20 x 12 20 x 12 22 x 14 22 x 14 25 x 14	16.2 16.0 15.8 15.0 14.3 13.7 12.9 12.1 11.2 10.6 9.7
QT38MM	38	10 x 6†	.6	ONOONIN		10 × 10	2.0		J BUS	HINGS	
JA15MM JA16MM JA19MM JA20MM JA24MM JA25MM JA28MM	15 16 19 20 24 25 28	5 x 5 5 x 5 6 x 6 6 x 6 8 x 6† 8 x 6† 8 x 5†	.8 .8 .8 .8 .8	SF28MM SF30MM SF32MM SF35MM SF38MM SF40MM SF42MM SF45MM SF45MM	28 30 32 35 38 40 42 45 48	8 x 7 8 x 7 10 x 8 10 x 8 10 x 8 12 x 8 12 x 8 14 x 9 14 x 9	4.7 4.6 4.5 4.4 4.2 4.2 4.1 3.9 3.7	J50MM J55MM J60MM J65MM J70MM J75MM J80MM J85MM J90MM J95MM J100MM	50 55 60 65 70 75 80 85 90 95	14 x 9 16 x 10 18 x 11 18 x 11 20 x 12 20 x 12 22 x 14 22 x 14 25 x 14 25 x 14 28 x 16	26.5 25.6 24.7 23.9 23.0 21.9 20.9 19.3 18.1 16.8 16.5
			0	SF50MM SF55MM	50 55	14 x 9 16 x 10	3.6 3.2				
SH24MM SH25MM SH28MM SH30MM SH32MM SH35MM	24 25 28 30 32 35	8 x 7 8 x 7 8 x 7 8 x 7 10 x 8 10 x 8	.9 .9 .9 .8 .8	SF65MM SF65MM	60 65 E BUSH	18 x 11 18 x 8 †	3.0 2.6	M80MM M90MM M100MM M120MM	80 90 100 120	22 x 14 25 x 14 28 x 16 32 x 18	55.0 51.2 46.9 37.0
				E35MM E38MM	35 38	10 x 8 10 x 8	10.2 10.0				
SDS24MM SDS25MM SDS28MM	24 25 28	8 x 7 8 x 7 8 x 7	1.5 1.5 1.4	E40MM E42MM E45MM E48MM E50MM	40 42 45 48 50	12 x 8 12 x 8 12 x 8 14 x 9 14 x 9 14 x 9	9.9 9.8 9.6 9.3 9.2	N100MM N120MM	100 120	28 x 16 32 x 18	72.3 60.2
SDS30MM SDS32MM	30 32	8 x 7 10 x 8	1.4 1.3	E55MM	55	16 x 10	8.6		P BUS	HINGS	
SDS35MM SDS38MM SDS40MM SDS42MM	35 38 40 42	10 x 8 10 x 8 12 x 8 12 x 8	1.2 1.1 1.1 1.0	E60MM E65MM E70MM E75MM E80MM	60 65 70 75 80	18 x 11 18 x 11 20 x 12 20 x 12 22 x 11†	8.1 7.6 7.1 6.9 6.3	P150MM	150	36 x 20	95.8
	SD BUSI	IINGS _			'	!					
SD24MM SD25MM SD28MM SD30MM	24 25 28 30	8 x 7 8 x 7 8 x 7 8 x 7	1.8 1.8 1.7 1.7	the Engl	ric system ish syster	n does not n; instead,	dimens	keyseat or k ions are giv re as in the E	en for the	e key itself,	which

- S is rectangular in shape and not square as in the English system. This meets ISO standards.
- † SHALLOW KEY FURNISHED

1.6

1.5

1.4

1.3 1.2

10 x 8

10 x 8

10 x 8

12 x 8

12 x 8

32

35

38

40

42

SD32MM

SD35MM

SD38MM


SD40MM

SD42MM



SURE-GRIP BRUSHINGS INSTALLATION INSTRUCTIONS

The Sure-Grip tapered, QD-type interchangeable bushing offers flexible and easy installation while providing exceptional holding power. To ensure that the bushing performs as specified, it must be installed properly.

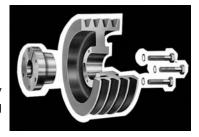


Before beginning, make sure the correct size and quantity of parts are available for the installation. The bushing has been manufactured to accept a setscrew over the key and its use is optional. It is packaged with the hardware on sizes SH to M and loosely installed in the bushing on sizes N to S.

To Install:

IMPORTANT:

DO NOT USE LUBRICANTS IN THIS INSTALLATION!

- Inspect the tapered bore of the sheave and the tapered surface of the bushing. Any paint, dirt, oil, or grease MUST be removed.
- 2. Select the type of mounting (See Fig. 1 or 2) that best suits your application.

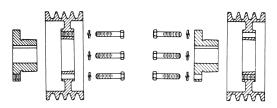

- 3. STANDARD MOUNTING: Install shaft key. (Note: If key was furnished with bushing, you must use that key.) Install bushing on clean shaft, flange end first. If bushing will not freely slide on the shaft, insert a screwdriver or similar object into the flange sawcut to act as a wedge to open the bushing's bore. Caution: Excessive wedging will split the bushing. If using the setscrew, tighten it just enough to prevent the bushing from sliding on the shaft. Caution: Do not over-tighten setscrew! Slide sheave into position on bushing aligning the drilled holes in the sheave with the tapped holes in the bushing flange. (Note: Install M thru S bushings so that the two tapped holes in the sheave are located as far away as possible from the bushing's sawcut.) Loosely thread the capscrews with lockwashers into the assembly. DO NOT USE LUBRICANT ON THE CAPSCREWS!
- 4. REVERSE MOUNTING: With large end of the taper out, slide sheave onto shaft as far as possible. Install shaft key. (See shaft key note in #3 above.) Install bushing onto shaft so tapered end will mate with sheave. (See wedging note in #3 above.) If using the setscrew, tighten it enough to prevent the bushing from sliding on the shaft. Caution: Do not over-tighten setscrew! Pull the sheave up on the bushing, aligning the drilled holes in the bushing flange with the tapped holes in the sheave. Loosely thread the capscrews with lockwashers into the assembly. DO NOT USE LUBRICANT ON THE CAPSCREWS!
- 5. Using a torque wrench, tighten all capscrews evenly and progressively in rotation to the torque value in Table. There must be a gap between the bushing flange and sheave hub when installation is complete. DO NOT OVER-TORQUE! DO NOT ATTEMPT TO CLOSE GAP BETWEEN BUSHING FLANGE AND SHEAVE HUB!

To Remove:

- Relieve drive tension by shortening the center distance between driver and driven sheaves.
- 2. Lift off belts.
- Loosen and remove cap screws. If the bushings have keyway setscrews, loosen them.
- 4. As shown below, insert cap screws (three in JA through J bushings, two in QT and M thru W bushings and four in S bushing) in tapped removal holes and progressively tighten each one until mating part is loose on bushing. (Exception: If mating part is installed with cap screw heads next to motor, with insufficient room to insert screws in tapped holes, loosen cap screws and use wedge between bushing flange and mating part.)
- Remove mating part from bushing and, if necessary, bushing from shaft.





SURE-GRIP BUSHINGS SCREW TIGHTENING INFORMATION

Tapered Bushing	Size & Thread of Cap Screw	FtLbs. To Apply With Torque Wrench
QT	1/4 x 20	9
JA	No. 10 - 24	5
SH-SDS-SD	1/4 - 20	9
SK	5/16 - 18	15
SF	3/8 - 16	30
E	1/2 – 13	60
F	9/16 – 12	110
J	5/8 – 11	135
M	3/4 – 10	225
MS	3/4 – 10	150
N	7/8 – 9	300
NS	7/8 – 9	200
P	1 – 8	450
PS	1 – 8	300
W	1-1/8 - 7	600
WS	1-1/8 - 7	400
S	1-1/4 - 7	750
SS	1-1/4 - 7	500

CAUTION: The tightening force on the screws is multiplied many times by the wedging action of the tapered surface. If extreme tightening force is applied, or if a lubricant is used, bursting pressures will be created in the hub of the mating part.